



Teensy[®] 4.0 Back Side

Additional pins and features available on the back side

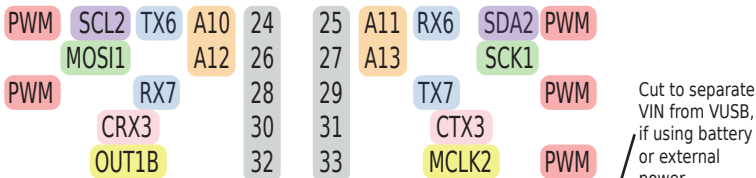

Cut to separate VIN from VUSB, if using battery or external power.

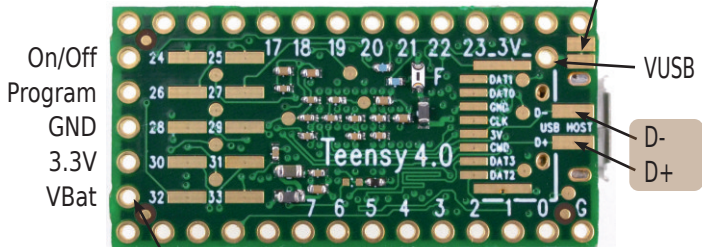

Use 3V coin cell for Date & Time and power management features


SD Card (4 bit SDIO)

SD Library
SD.begin(BUILTIN_SDCARD)

USB Host

USBHost_t36 Library

Teensy 4.0 signal pins are **not** 5V tolerant. Do not apply more than 3.3 volts to any pin, except VIN or VUSB.

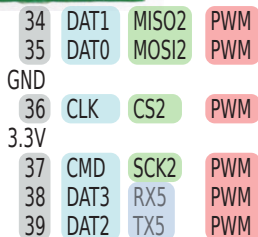

For solutions to the most common issues and technical support, please visit:

www.pjrc.com/help

Teensy 4.0 System Requirements:

- PC computer with Windows 7, 8, 10 or later
- or Ubuntu Linux 14.04 or later
- or Macintosh OS-X 10.8 or later
- USB Micro-B Cable

